



INSTRUCTION MANUAL FOR CROWNPAK[®] CR-I(+) and CROWNPAK[®] CR-I(-)

<Normal Phase>

Please read this instruction sheet completely before using these columns

These columns can also be used in reversed phase mode. Please refer to the corresponding instruction sheet for details.

Switching Between RP and NP Mode

Shipping solvent of CROWNPAK CR-I(+)/CR-I(-) columns are H₂O/MeOH=95/5.

To switch from reversed phase mode to normal phase mode, and vice versa, column should be carefully flushed with miscible solvent (ethanol and 2-propanol).

Sufficient equilibration time is necessary for the stabilization of retention times when the column is switched from reversed phase mode to normal phase mode.

Operating Procedure / Normal Phase

A. Mobile phase

When developing methods, we would recommend reversed phase mode as a first choice. Normal phase mode is a second choice.

Primary solvent	Alkane [•] /EtOH [•] /TFA [•] /H ₂ O [•]
Typical starting conditions (v/v/v/v)	50 / 50 / 0.5 / 0.5
Advised optimisation range	70 / 30 / 0.5 / 0.5 ~
(v/v/v/v)	30 / 70 / 0.5 / 0.5

- Alkane = n-Hexane, iso-Hexane or n-Heptane. Some small selectivity differences may sometimes be found.
- The retention is generally quite shorter with Ethanol than with 2-Propanol.
- Use TFA at less than 1.0% to prolong column life time.
- **9** By the addition of H_2O , the peak shapes can be improved. When additive amount of H_2O is so high, the mobile phase is not miscible. Maximum additive amount allowed of H_2O is depending on the kinds and proportion of alcohol. In the case of n-Hexane / EtOH = 50 / 50 (v/v), the additive amount of H_2O is up to 3.0%.

Column Care / Maintenance

- □ When washing is required, use the solvent which can dissolve the sample such as pure methanol or ethanol at 0.2 mL/min for about 2 hours (room temperature).
- \Box The column should be immediately flushed with a mobile phase without the TFA and H₂O after the use.
- n-Hexane / ethanol = 50 / 50 can be used as a storage solvent when used continuously under normal phase.

Refer to instruction sheet for reverse phase and column care/maintenance.

Operating these columns in accordance with the guidelines outlined here will result in a long column life.

- \Rightarrow If you have any questions about the use of this column, or encounter a problem, contact:
- In the USA: <u>questions@chiraltech.com</u> or call 800-6-CHIRAL
- In the EU: <u>cte@chiral.fr</u> or call +33-388-795-200
- In India: chiral@chiral.daicel.com or call +91-40-2338-3700

Locations:

North/Latin America

Chiral Technologies. Inc. 800 North Five Points Road West Chester, PA 19380 800 6 CHIRAL Tel: 610-594-2100 Fax: 610-594-2325 chiral@chiraltech.com www.chiraltech.com

Europe

Chiral Technologies Europe Parc d'Innovation Bd Gonthier d'Andernach 67400 Illkirch Cedex, France Tel: +33-388-795-200 Fax: +33-388-667-166 cte@chiral.fr www.chiraltech.com

India

Daicel Chiral Technologies (India) Pvt. Ltd. Lab No. 4A, Phase III, IKP Knowledge Park Genome Valley, Turkapally, Shameerpet, Ranga Reddy Dist. Hyderabad-500 078, Telangana Tel: +91-40-2338-3700 Fax: +91-40-2348-0104 chiral@chiral.daicel.com www.chiraltech.com